Akko

ACRYLIC 59

用户手册
User Manual

▌目录

Menu

▌系统功能　　　　　　　　　　　　　　　　　　　　　　　

注：以下功能通过Fn+对应键组合实现

Esc	~		Backspace	Delete		<	调低音量
1	F1		W	↑		>	调高音量
2	F2		S	↓			
3	F3		A	←			
4	F4		D	→			
5	F5		Y	PgUp			
6	F6		H	PgDn			
7	F7		U	Home			
8	F8		J	End			
9	F9		I	Insert			
0	F10		P	PrtSc			
-	F11		C	计算器			
+	F12		M	静音			

修改键位

Fn + 左Alt(3秒) = 右Alt改为Win
Fn + 右Ctrl(3秒) = 右Ctrl改为Menu
Fn + Capslock(3秒) = Capslock改为Ctrl

恢复出厂设置

长按 Fn + Backspace (5秒)

▌灯光功能

注：以下功能通过Fn+对应键组合实现

[	灯光亮度变暗
]	灯光亮度变亮
\	灯光颜色切换
L	灯光开启或关闭
Enter	灯光模式切换
:	灯光速度变慢
"	灯光速度变快
Z	侧边灯光亮度切换，4档循环切换，包括切换
X	侧边灯光速度切换，4档循环切换
空格	侧面灯光模式切换，包括切换

Akko Macro V1.0宏定义功能说明 1

1. 自定义功能无需驱动软件，根据说明操作可直接使用。

2. "Esc"，"Fn"，"空格"三颗功能键无法自定义。

3. 目前Akko Macro V1.0不支持同时触发，即"AB"同时按下依然以A，B顺序触发。

4. 目前Akko Macro V1.0不支持自定义间隔时间，即无法定义A，B之间的间隔，不论你按的快或者慢，都会以系统默认的触发时间定义。

```
┌─────────────┐   ┌─────────────┐   ┌─────────────┐   ┌─────────────┐   ┌─────────────┐
│  进入自定义层  │──▶│  进入自定义模式 │──▶│  Fn+任意键    │──▶│  输入自定义内容 │──▶│  Fn+该按键    │
│  长按Fn+Esc  │   │  Fn+Spacebar │   │ (选择该键开始自定义)│   │  （宏定义）    │   │ (结束该键自定义) │
└─────────────┘   └─────────────┘   └─────────────┘   └─────────────┘   └─────────────┘
                                    开始下一个按键自定义
                         ┌─────────────┐   ┌─────────────┐
                         │  退出自定义层  │◀──│  退出自定义模式 │
                         │ 回到默认键位模式 │   │  Fn+空格     │
                         └─────────────┘   └─────────────┘
```
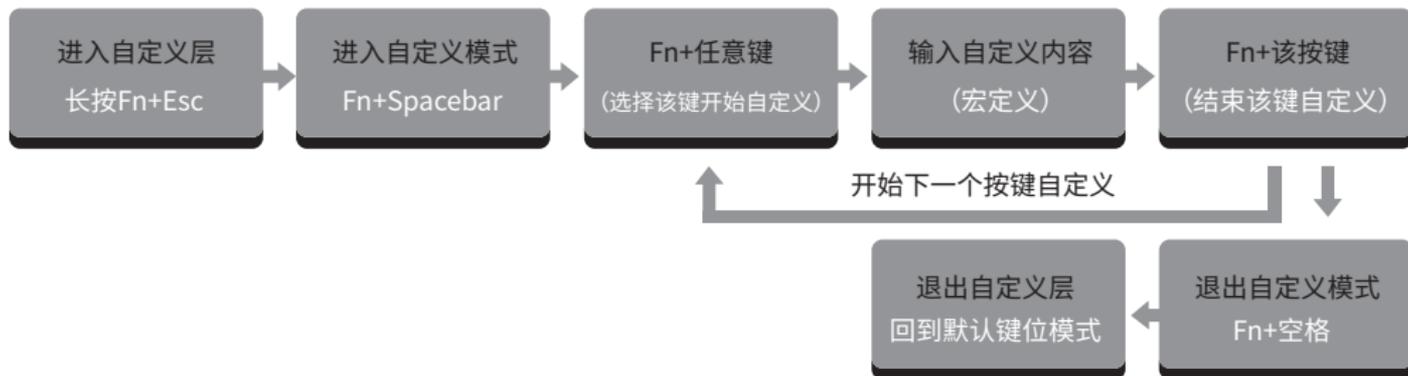
清除宏： 如果该按键已经进行了自定义，当进入自定义模式后，按下FN+该按键则会清除该按键的宏。
如果要对该按键重新进行自定义，则在清除宏后再按照正常步骤按下FN+该键，开始自定义。

Akko Macro V1.0宏定义功能说明 3

宏定义示例：将A定义成 akkogear

第一步：长按Fn+Esc 3秒，进入自定义层

第二步：按Fn+空格，开始宏定义

第三步：按Fn+A，选择A开始宏定义

第四步：按照顺序按下a,k,k,o,g,e,a,r

第五步：按Fn+A，结束A的宏定义

此时，按A就会显示akkogear，如果您还要对B进行宏定义，按下Fn+B，开始B的宏定义

第六步：按Fn+空格退出宏定义

在自定义层下，就可以操作您设置的键位和宏了

第七步：长按Fn+Esc 3秒，退出自定义层，回到默认键位

Akko Macro V1.0宏定义的调用

方法一:

进入自定义层(长按Fn+ESC),进入自定义层之后,所有按键变成已经自定义的内容,在这个模式下,您可以任意的使用已经编辑好的按键。自定义层不被记录,关机或者插拔后需要会恢复到默认键位,需要重新操作后进入自定义层。

方法二:

在默认键位下,通过Fn+右Alt+已经定义的按键,快速调用该按键的自定义内容,注意一定要按照先按Fn再按Alt的顺序调用。

▌Akko 售后服务规范

1.Akko机械键盘享受非人为损坏1年保修服务，即从购买日起，1年以内免费维修。
2.如超过条款1的保修期限，Akko官方将收取不超过市场平均价格的费用提供维修服务。
3.用户自行拆开键盘视为放弃免费维修服务，即使1年内损坏，也按照售后服务条款2执行。
4.不同销售平台的特殊服务条款，以购买平台规则为准。

注意事项	人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品，请按照电子产品保护方式爱惜使用。

售后电话：0755-27728007   售后QQ：981572876

*官方售后服务时间为每周一至周五上午10：00至下午18：00，节假日以国家法定节日休息为准。
*因受维修时间，物流时间，零件采购时间等不可控因素，售后时间会有不同，以实际损坏情况评估为准，
 请用户耐心等待。

System Commands

Note: The following features are realized by the combination of "Fn" + corresponding key

Esc	~
1	F1
2	F2
3	F3
4	F4
5	F5
6	F6
7	F7
8	F8
9	F9
0	F10
-	F11
+	F12

Backspace	Delete
W	↑
S	↓
A	←
D	→
Y	PgUp
H	PgDn
U	Home
J	End
I	Insert
P	PrtSc
C	Calculator
M	Mute

<	Decrease Volume
>	Increase Volume

Key Remap

Fn + left Alt (3 sec) = Remap right Alt to Win
Fn + right Alt (3 sec) = Remap right Ctrl to Menu
Fn + Capslock (3 sec) = Remap Capslock to Ctrl

Restore Factory Settings

Press and hold the Fn + Backspace together (5 sec)
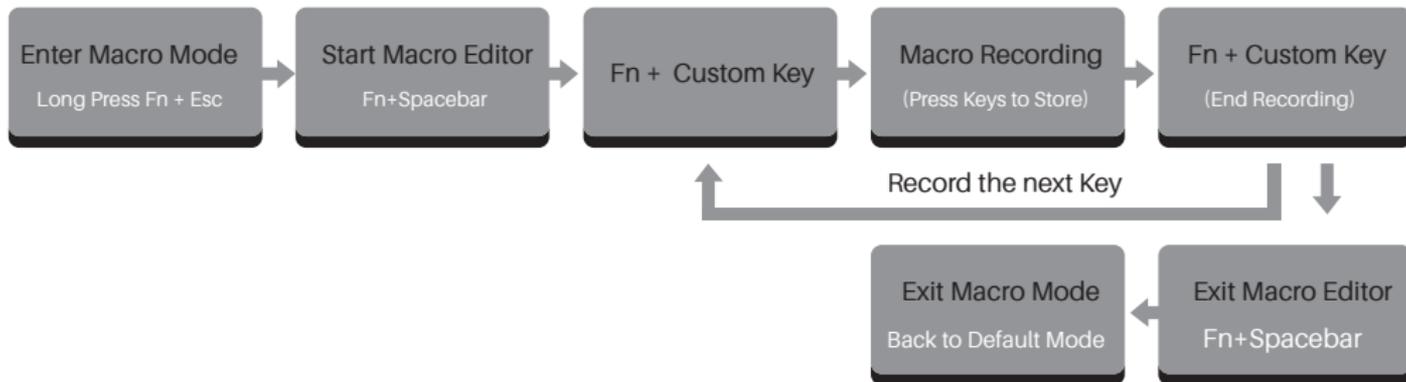
Backlight Settings

Note: The following features are realized by the combination of "Fn" + corresponding key

[	Dim
]	Bright
\	Change Color
L	Light On / Off
Enter	Light Effects Switch
:	Slower Animation
"	Faster Animation
Z	Acrylic Case Light Brightness Change (4-level Cyclic Switch)
X	Acrylic Case Light Animation Speed Change (4-level Cyclic Switch)
Spacebar	Acrylic Case Light Effect Change (including the option to turn off side light completely)

Akko Macro V1.0 Macro Setup Instruction 1

1. Akko Macro V1.0 is hardware-based and works without software-driven.

2. The following keys cannot be programmed: "Esc", "Fn"and "Spacebar".

3. Akko Macro V1.0 does not support simultaneous trigger, that is, pressing "AB" at the same time will trigger the two keys in the order of A followed by B.

4. Akko Macro V1.0 does not support customized interval time, that is, the trigger interval between key A and key B cannot be defined and will follow the system's default trigger time.

```
Enter Macro Mode      Start Macro Editor      Fn + Custom Key      Macro Recording      Fn + Custom Key
Long Press Fn + Esc   Fn+Spacebar                                  (Press Keys to Store) (End Recording)
```

Record the next Key

```
Exit Macro Mode       Exit Macro Editor
Back to Default Mode  Fn+Spacebar
```

Clear Macro:

If a key has been defined, after entering the Macro editor, you can press "FN + the key" to clear its definition.

If you want to re-customize that key, press "FN + the key"again to start the new Macro recording after clearing its old definition.

Macro Recording Example: Define "A" as "AKKOGEAR"

Step 1: Press Fn + Esc for 3 seconds to enter the Macro mode.

Step 2: Press Fn + Spacebar to launch Macro editor.

Step 3: Press Fn + A. This means we choose key "A" to record.

Step 4: Press A, K, K, O, G, E, A, R in order as replacement definition of "A".

Step 5: Press Fn + A again to end the Macro recording of key "A".

At this point, pressing "A" in notepad will display "AKKOGEAR".

If you want to create a Macro for key "B", press Fn + B to start the Macro recording.

Step 6: Press Fn + Spacebar to exit Macro editor.

Under the Macro mode, you can configure the keys and Macros you set.

Step 7: Press and hold Fn + Esc for 3 seconds to exit the Macro mode and return to the default key definition.

Method A:

Enter the Macro mode by long pressing Fn+. Then all keys will turn to pre-configured definitions with locked.In the Macro mode, you can use keys with customized definitions.Note, everytime you reboot or re-plugged the cable of the keyboard, the Macro mode will be turned off by default andall keys will return to default definitions until you re-enter the Macro mode.

Method B:

Under the default key definition, you can also quickly call the customized content of specific keys through "Fn+right Alt+the key that has been defined through Macro". Note that you must first press Fn and then press Alt to call the Macro.

Akko Warranty and Service Statement

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.

2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users

prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happenedduring self-repair.

3. Dissembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.

4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

| Precautions | Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc. |

Akko

www.akkogear.com

扫描关注官方微信

扫描关注官方微博

instagram.com/akkogear

facebook.com/akkogear